

HOBO® U10 Temp/RH Data Logger (Part # U10-003)

Inside this package:

- HOBO U10 Temp/RH Logger
- Mounting kit with magnet, hook-and-loop tape, and 3/8” double-sided tape.

Thank you for purchasing a HOBO data logger. With proper care, it will give you years of accurate and reliable measurements.

The HOBO U10-003 is a two-channel Temperature/Relative Humidity Data Logger with 10-bit resolution and capacity for 52,000 measurements. The logger uses a direct USB interface for launching and data readout by a computer.


HOBOware® software is required for logger operation. Visit [www.onsetcomp.com](http://www.onsetcomp.com) for details.

Doc # 11196-A, MAN-U10-003  
Onset Computer Corporation



Specifications


Measurement range	Temperature: -20° to 70°C (-4° to 158°F) RH: 25% to 95% RH
Accuracy	Temperature: ± 0.4°C from 0° to 40°C (± 0.72°F from 32° to 104°F), see Plot A RH: ± 3.5% from 25% to 85% over the range of 15° to 45°C (59° to 113°F), see Plot B; ± 5% from 25% to 95% over the range of 5° to 55°C (41° to 131°F), see Plot B
Resolution	Temperature: 0.1°C at 25°C (0.2°F at 77°F), see Plot A RH: 0.07% @ 25°C and 30% RH
Drift	Temperature: 0.1°C/year (0.2°F/year) RH: <1% per year typical
Response time in airflow of 1 m/s (2.2 mph)	Temperature: 10 minutes, typical to 90% RH: 6 minutes, typical to 90%
Time accuracy	Approximately ± 1 minute per month at 25°C (77°F), see Plot C
Operating range	Logging: -20° to 70°C (-4° to 158°F); 0 to 95% RH (non-condensing)
Battery life	1 year typical use
Memory	64K bytes (52,000 10-bit measurements)
Weight	26 g (0.82 oz)
Dimensions	45 x 60 x 20 mm (1.8 x 2.38 x 0.77 inches)
CE	The CE Marking identifies this product as complying with the relevant directives in the European Union (EU).

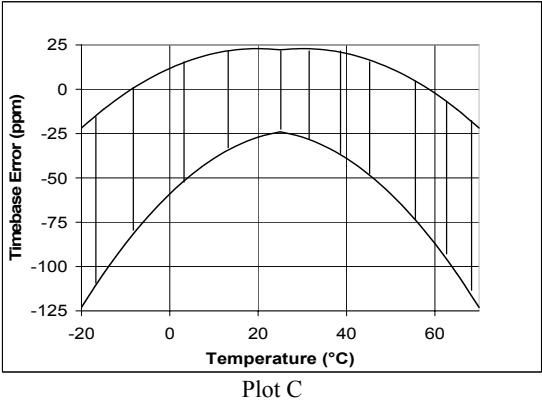


Connecting the logger

The U-Series logger requires an Onset-supplied USB interface cable to connect to the computer. If possible, avoid connecting at temperatures below 0°C (32°F) or above 50°C (122°F).

1. Plug the large end of the USB interface cable into a USB port on the computer.
2. Plug the small end of the USB interface cable into the side of the logger as shown in the following diagram.
3. Load and use logger software to operate the logger (see software manual).

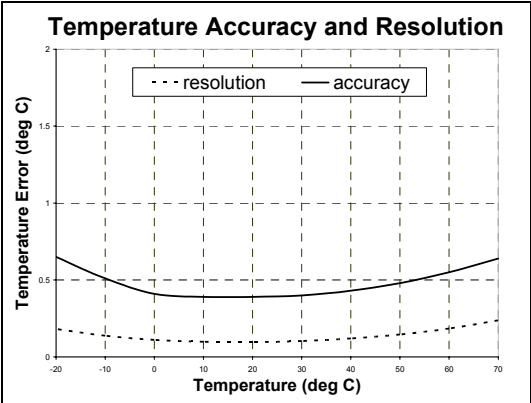


Plot A

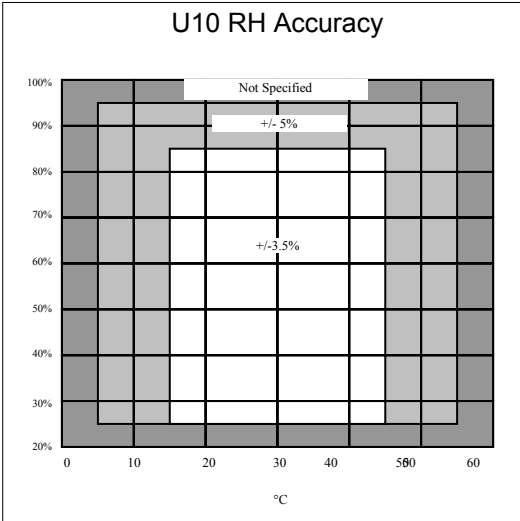

Plot B

**Important:** Press this button for **3 seconds** when logger is launched with “Trigger Start” or press for **1 second** to record an event while logging

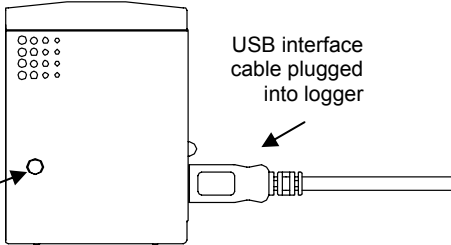

If the logger has never been connected to the computer before, it may take a few seconds for the new hardware to be detected

**Important: If you configure the logger to start with a trigger start, be sure to press and hold down the button on the front of the logger for at least three seconds when you want to begin logging. When you release the button, the light on the side of the logger will flash rapidly to indicate that logging has begun.**

You can read out the logger while it continues to log, stop it manually with the software, or let it record data until the memory is full.

Refer to the software user’s guide for complete details on launching, reading out, and viewing data from the logger.

Sample and event logging

The logger can record two types of data: samples and events. Samples are the sensor measurements recorded at each logging interval (for example, the temperature every minute). Events are independent occurrences triggered by logger activity. Examples of events recorded asynchronously during deployment include: when the logger is connected to the host, when the battery is low, end of a datafile once the logger is stopped, and button pushes.


Press the button on the front of the logger for one second to record an event. Both a “button down” and a “button up” event will be recorded. This is useful if you want to mark the datafile at a particular point.

The logger stores 64K of data, and can record up to 52,000 samples.

Logger operation

A light (LED) on the side of the logger confirms logger operation.

The following table explains when the logger blinks during logger operation.

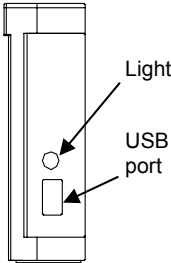

When:	The light:
The logger is logging	Blinks once every one to four seconds (the shorter the logging interval, the faster the light blinks); blinks when logging a sample
The logger is awaiting a start because it was launched in Start At Interval, Delayed Start, or Trigger Start mode	Blinks once every eight seconds until launch begins
The button on the logger is being pushed for a Trigger Start launch	Blinks once every second while pressing the button and then flashes rapidly once you release the button. The light then reverts to a blinking pattern based on the logging interval

Using the RH sensor

Your HOBO U10 Temp/RH data logger has a temperature-compensated, user-replaceable RH sensor. In order to take humidity measurements, temperature must be recorded as well as RH.

Conditions outside the recommended range may offset the RH signal. Vapors may also affect the RH sensor. The diffusion of chemicals into the sensor may cause a shift in both offset and sensitivity. High levels of pollutants may cause permanent damage to the sensor. The logger’s RH sensor will be damaged if exposed to condensation. It must not be exposed to fog, mist, or other condensing environments.

Protecting the logger

The logger can be permanently damaged by corrosion if it gets wet. Protect it from condensation. If it gets wet, remove the battery immediately and dry the circuit board with a hair dryer before reinstalling the battery. Do not let the board get too hot. You should be able to comfortably hold the board in your hand while drying. If your unit has an RH sensor, it should be replaced if it became wet.

**Note! Static electricity may cause the logger to stop logging.** To avoid electrostatic discharge, transport the logger in an anti-static bag, and ground yourself by touching an unpainted metal surface before handling the logger. For more information about electrostatic discharge, visit <http://www.onsetcomp.com/support/support.html>.

Mounting

There are three ways to mount the logger using the materials in the mounting kit included with the logger.


- Use the hook-and-loop tape to affix the logger to a surface.
- Attach the magnet and then place the logger on a flat magnetic surface.
- Use the double-sided tape to affix the logger to a surface.

Battery

The logger requires one 3-Volt CR-2032 lithium battery. Expected battery life varies based on the temperature and the frequency at which the logger is recording data (the logging interval). A new battery will typically last one year with logging intervals greater than one minute. Deployments in extremely cold or hot temperatures, or logging intervals faster than one minute, may significantly reduce battery life.

To replace the battery:

1. Disconnect the logger from the computer.
2. Open the case by unsnapping the side cover.
3. Lift the circuit board and carefully push the battery out with a small blunt instrument, or pull it out with your fingernail.
4. Insert a new battery, positive side facing up.
5. Carefully realign the logger in the case and re-close it.

**WARNING:** Do not cut open, incinerate, heat above 85°C (185°F), or recharge the lithium battery. The battery may explode if the logger is exposed to extreme heat or conditions that could damage or destroy the battery case. Do not dispose of the logger or battery in fire. Do not expose the contents of the battery to water. Dispose of the battery according to local regulations for lithium batteries.

Service and Support

As part of Onset’s ongoing efforts to provide 100% customer satisfaction, our Continuing Engineering Group constantly monitors and evaluates all of our products and software. In the unlikely event any significant defect is found, Onset will notify you. If you find a defect, please e-mail us at [loggerhelp@onsetcomp.com](mailto:loggerhelp@onsetcomp.com).

HOBO products are easy to use and reliable. In the unlikely event that you have a problem with this instrument, contact the company where you bought the logger: Onset or an Onset Authorized Dealer. Before calling, you can evaluate and often solve the problem if you write down the events that led to the problem (are you doing anything differently?) and if you visit the Technical Support section of the Onset web site at [www.onsetcomp.com/support.html](http://www.onsetcomp.com/support.html). When contacting Onset, ask for technical support and be prepared to provide the product number and serial number for the logger and software version in question. Also completely describe the problem or question. The more information you provide, the faster and more accurately we will be able to respond.

Onset Computer Corporation  
470 MacArthur Blvd., Bourne, MA 02532  
Mailing: PO Box 3450, Pocasset, MA 02559-3450  
Phone: 1-800-LOGGERS (1-800-564-4377) or 508-759-9500  
Fax: 508-759-9100  
E-mail: [loggerhelp@onsetcomp.com](mailto:loggerhelp@onsetcomp.com)  
Internet: [www.onsetcomp.com](http://www.onsetcomp.com)

Warranty

Onset Computer Corporation (Onset) warrants to the original end-user purchaser for a period of **one year** from the date of original purchase that the HOBO® product(s) purchased will be free from defect in material and workmanship. During the warranty period Onset will, at its option, either repair or replace products that prove to be defective in material or workmanship. This warranty shall terminate and be of no further effect at the time the product is (1) damaged by extraneous cause such as fire, water, lightning, etc. or not maintained in accordance with the accompanying documentation; (2) modified; (3) improperly installed; (4) repaired by someone other than Onset; or (5) used in a manner or purpose for which the product was not intended.

**THERE ARE NO WARRANTIES BEYOND THE EXPRESSED WARRANTY ABOVE. IN NO EVENT SHALL ONSET BE LIABLE FOR LOSS OF PROFITS OR INDIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL OR OTHER SIMILAR DAMAGES ARISING OUT OF ANY BREACH OF THIS CONTRACT OR OBLIGATIONS UNDER THIS CONTRACT, INCLUDING BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY.**

**Limitation of Liability.** The Purchaser's sole remedy and the limit of Onset's liability for any loss whatsoever shall not exceed the Purchaser's price of the product(s). The determination of suitability of products to the specific needs of the Purchaser is solely the Purchaser's responsibility. **THERE ARE NO WARRANTIES BEYOND THE EXPRESSED WARRANTY OFFERED WITH THIS PRODUCT. EXCEPT AS SPECIFICALLY PROVIDED IN THIS DOCUMENT, THERE ARE NO OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A**

**PARTICULAR PURPOSE. NO INFORMATION OR ADVICE GIVEN BY ONSET, ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THE EXPRESSED WARRANTY OFFERED WITH THIS PRODUCT.**

**Indemnification.** Products supplied by Onset are not designed, intended, or authorized for use as components intended for surgical implant or ingestion into the body or other applications involving life-support, or for any application in which the failure of the Onset-supplied product could create or contribute to a situation where personal injury or death may occur. Products supplied by Onset are not designed, intended, or authorized for use in or with any nuclear installation or activity. Products supplied by Onset are not designed, intended, or authorized for use in any aeronautical or related application. Should any Onset-supplied product or equipment be used in any application involving surgical implant or ingestion, life-support, or where failure of the product could lead to personal injury or death, or should any Onset-supplied product or equipment be used in or with any nuclear installation or activity, or in or with any aeronautical or related application or activity, Purchaser will indemnify Onset and hold Onset harmless from any liability or damage whatsoever arising out of the use of the product and/or equipment in such manner.

Returns

Please direct all warranty claims and repair requests to place of purchase.

Before returning a failed unit directly to Onset, you must obtain a Return Merchandise Authorization (RMA) number from Onset. You must provide proof that you purchased the Onset product(s) directly from Onset (purchase order number or Onset invoice number). Onset will issue an RMA number that is valid for 30 days. You must ship the product(s), properly packaged against further damage, to Onset (at your expense) with the RMA number marked clearly on the outside of the package. Onset is not responsible for any package that is returned without a valid RMA number or for the loss of the package by any shipping company. Loggers must be clean before they are sent back to Onset or they may be returned to you.

Repair Policy

Products that are returned after the warranty period or are damaged by the customer as specified in the warranty provisions can be returned to Onset with a valid RMA number for evaluation.

**ASAP Repair Policy.** For an additional charge, Onset will expedite the repair of a returned product.

**Data-back™ Service.** HOBO data loggers store data in nonvolatile EEPROM memory. Onset will, if possible, recover your data.

**Tune Up Service.** Onset will examine and retest any HOBO data logger.

---

© 2005, 2006 Onset Computer Corporation. All rights reserved.  
Part #: MAN-U10-003, Doc #: 11196-A, Patent # 6,826,664  
Onset and HOBO are registered trademarks of Onset Computer Corporation. Other products and brand names may be trademarks or registered trademarks of their respective owners.